

<<Xiaoxiang Electric APP (Operation Terminal)-Instruction Manual>>

Compilation: Zhu Jie Review: Zhang Qiaoqiao Approval: Liu Guanghui



Version Number	Page/Chapter Number	Revised by	Revision date	Modify the content	Remark
A0	full text	Zhu Jie	2022.03.03	new fiction	
					$\boldsymbol{\wedge}$.
					\sim

Content

1	reface
2	eatures
3	PP User Guide
3.1	perating Environment
3.2	ogin Connection
3.3	etting Permissions Open
3.4	ive Interface
3.5	Control Interface
3.6	Parameter Interface
3.7	sers Interface
4	ervice



1. Introduction

Xiaoxiang Electric APP is a lithium battery management APP independently developed by Shenzhen Jiabaida Electronic Technology Co., Ltd. The APP mainly displays: lithium battery voltage, current, capacity, temperature and other curves, charge and discharge switch control, SOC, battery voltage, Charge and discharge current, protection status, basic parameters, etc., through the background permission operation, the parameters of the lithium battery protection board can be set to make the health status of the lithium battery more transparent and ensure the safety of the use of the lithium battery. According to market feedback, the upgraded version of Xiaoxiang Electric optimizes the overall interface, adopts a modular layout, and adds more parameters and function settings, just to bring users a faster, more complete and stronger experience.

IOS-client



Android-client



Scan the code to jump to the download address, and follow the instructions to complete the download and installation.

2. Function introduction

module	Function	describe	Example
history	Voltage, current, remaining capacity, temperature	Display the battery maximum, minimum, average voltage, battery current, remaining capacity, BMS board temperature change curve	The last 100 pieces of data, one per minute,Graph
control	charging switch, discharge switch, automatic equalization switch, current calibration, voltage calibration, clear alarm, reset	Send commands through the APP to control the BMS board; turn on the	Control switch: on/off; voltage, current calibration: input value



	capacity	equalization; modify the calibration voltage and current values; clear the alarm data; reset remaining capacity	
real time	SOC display diagram, Estimated filling time, Estimated release time, charging switch, Discharge switch, Equilibrium, Protection status, total voltage, current, power, Maximum voltage (single string), Minimum voltage (single string), Average voltage, differential pressure, Cycles, temperature, humid ity, Rated charging voltage, Rated discharge current, Rated charging current, Rated discharge power, Single String Voltage Information	Dashboard, displaying battery voltage, current, temperature, SOC, protection status, differential pressure, cycle times and other data	Real-time data of battery static, charging and discharging
parameter	Basic information, initial settings, protection parameters, current settings, temperature settings, equalization settings, capacity-voltage curve, connection resistance, function settings, system settings	Display the basic information, parameters and additional function settings of the protection board	Real-time parameter display and setting
mine	Complete information, un-bundle equipment, use instructions for lithium batteries, use instructions for BMS, about us, log out of account	Display personal information and settings, instructions for use, and introduction to our company, purchase channels, etc.	Account information, manufacturer information, etc.

Note: Due to the upgrade of BMS and the addition of functions, the upgraded version of the Xiaoxiang Electric APP is compatible with our company's new and old BMS boards. It will be displayed according to the protocol differences of the BMS boards, and the interface and functions will be different, which is a normal phenomenon.



3. APP User Guide

3.1 Operating Environment

Android version 5.0 / IOS version 10.0 or above, it can be used on devices that support Bluetooth 4.0, and it can run after obtaining the permission to use Bluetooth and GPS.

3.2 Login connection

3.2.1 Registering an Account

After the Xiaoxiang Electric APP is successfully installed, open the APP, allow Bluetooth to be turned on, and obtain location information, the APP will automatic jump into the account registration page, please enter the mobile phone number as required, set the password, and click Confirm when finished.

▪ III 中国移动 4G	11:37 注册	
手机号		
登录密码		
确认登录密码		
	注册	
	已有账号?登录	

APP physical display Figure 1

3.2.2 Bluetooth connect/disconnect

(1) Connect to Bluetooth: After successful login, the APP will jump to the Bluetooth list, select the Bluetooth that needs to be connected to connect.

- (2) Switch battery: When there are multiple batteries, you can check and choose multiple bluetooth names in the list, and quickly switch the battery to be connected on the real-time interface
- (3) Scan code connection: In the upper right corner of the real-time interface, click the scan code button to connect directly by scanning the bar-code of the Bluetooth module



(4) Search for Bluetooth: On the device list page, when there are multiple batteries, you can quickly find the battery that needs to be connected by searching for the Bluetooth name(5) Disconnect Bluetooth: On the device list page, click Disconnect.

ull中国移动 4G	10:21	● ✓ ● \$ 85% ■	
←	设备列表	🔨 🗸 🖓	
勾选设备可加入监控,	可在"实时"页面切	搜索蓝牙)换查看设备状态(<mark>起码)连接</mark>	
A4:C1:38:11:7F:2E	RSSI:-48	连接	
SP17S003 A4:C1:38:9B:F7:F2	RSSI:-48	连接	1/7
A4:C1:38:B6:C1:E6	RSSI:-92	连接	
		人 点击连接蓝牙;连接 后点击为断开	



APP physical display Figure $2\,$



3.3 Setting permissions to activate

After the APP is downloaded, the initial interface is the user version. The user version has



no parameter viewing and setting function pages. It is necessary to apply for the APP setting permission. The specific steps are as follows:

1. The prerequisite is that you need to register an account before you can apply for opening, because you need to bind the Bluetooth address and account in the background;

2. After the account registration is completed, connect to the corresponding Bluetooth. After the connection is successful, a prompt dialog box will automatically pop up: whether to bind the device or not. After selecting the binding, the Bluetooth management platform receives the request. After verification by the background administrator, the setting permission is opened.

3. After the account is set up in the background, the APP will display the parameter setting interface accordingly. If it is not updated immediately, you can try to disconnect the current Bluetooth, and then connect to refresh.

3.4 Real-time interface

1. Capacity information: Only the battery SOC percentage and remaining capacity are displayed when it is static; the estimated full time is displayed when charging; the estimated emptying time is displayed when discharging.

2. Switch and protection status: the current status of the charge and discharge switch is displayed, when the switch is turned on, it is on, otherwise it is off; the balance status display, the balance is turned on, it is on, and vice versa; the protection status display, when the protection board triggers the protection threshold or manual control When charging and discharging, the protection state displays the corresponding protection state, and it displays off when the protection state is not triggered.

3. Battery information: total voltage, current, power, maximum single-cell voltage, minimum single-cell voltage, average voltage, voltage difference, cycle times, read or calculated through the protection board, and the above data is displayed on the APP.

4. Temperature and humidity: The MOS temperature is the ambient temperature of the protection board, the others are the external NTC temperature, and the temperature of the cell is detected; the humidity is the ambient humidity, which needs to be installed with a humidity probe to display.

5. Rated parameters:Rated charging voltage, current, rated discharge current, rated discharge power.

6. Single string voltage: single string cell voltage, the protection board collects cell information, the highest voltage is displayed in green, the middle value is displayed in blue, and the lowest voltage is displayed in gray.





APP physical display Figure 4



Class: D-Class - Public



3.5 Control interface

3.5.1 General Description

1. Charge and discharge switch: Through the APP, you can directly control the charge and discharge switch to open or close, and control the charging/discharging of the battery.

2. Automatic equalization: Forcibly open the equalization function. When the opening is successful,

一 嘉佰达利技				
	Shenzhen Jiabaida Electronic Technology Co., Ltd.	Class:	D-Class	- Public

the real-time interface equalization status will be displayed.

3. Current calibration: When there is a deviation between the charging/discharging current and the actual value, the current value can be calibrated through the APP.

4. Voltage calibration: When there is a deviation between the voltage of a single string and the actual one, the voltage value can be calibrated through the APP.

5. Clear alarm: clear alarm data.

6. Reset capacity: Re-estimate the remaining capacity through the current voltage value.

ull 中国移动 4G	10:23 控制	@• - 1 0 % 85% ■ ■)•	
充电开关		放电开关 3 已开启	
る。自动均衡	电流校准	してたである。	
· 了了· 清除告警	重置容量		



APP physical display Figure 6 11/26



3.5.2Current and voltage calibration



APP physical display Figure 7

•••• 中国移动 4G	15:06	@ ≁ Ö ¥ 87% 🔲 ́	
\leftarrow	电压校准		
第1串电压	3601m	SET	Class: D-Class -
第2串电压	输入电压值,范 击"SET"即可	范围1-4250; 输入完成点	
第3串电压	3616m	SET	
第4串电压	3616m	SET	
第5串电压	3616m	SET	X
第6串电压	3601m	SET	
第7串电压	3617m	SET	
\sim \sim		完成	
1	2 АВС	3 Def	
4 6ні	5 JKL	6 MNO	
7 pqrs	8	9 wxyz	
	0	$\langle \times \rangle$	

APP physical display Figure 8

3.6 Parameter interface 3.6.1 Parameter introduction

primary secondary information information		Example	
	Blue-tooth name	Xiaoxiangbms, modifiable	
	serial number	Can be modified according to customer	
		needs	



Class: D-Class - Public

Basic InformationneedsBasic Informationbattery modelCan be modified according to customer needsbattery manufacturerDGJBD, can be modifiedBMS version number30, read the BMS version, cannot be modifiedBMS modelSP17S003, read cannot be modifiedProduction Date2022-1-18, read unmodifiableBMS address24 digits, read and cannot be modifiedRated charging current19.0A, read unmodifiableRated shop power492W, read unmodifiableNominal capacity10000mAH, can be modified
Basic Informationbattery modelCan be modified according to customer needsbattery manufacturerDGJBD, can be modifiedBMS version number30, read the BMS version, cannot be modifiedBMS modelSP17S003, read cannot be modifiedProduction Date2022-1-18, read unmodifiableBMS address24 digits, read and cannot be modifiedRated charging current20.0A, read cannot be modifiedRated discharge current19.0A, read unmodifiableNominal capacity10000mAH, can be modified
Basic Informationneedsbattery manufacturerDGJBD, can be modifiedBMS version number30, read the BMS version, cannot be modifiedBMS modelSP17S003, read cannot be modifiedProduction Date2022-1-18, read unmodifiableBMS address24 digits, read and cannot be modifiedRated charging current20.0A, read cannot be modifiedRated discharge current19.0A, read unmodifiableRated shop power492W, read unmodifiableNominal capacity10000mAH, can be modified
battery manufacturerDGJBD, can be modifiedBMS version number30, read the BMS version, cannot be modifiedBMS modelSP17S003, read cannot be modifiedProduction Date2022-1-18, read unmodifiableBMS address24 digits, read and cannot be modifiedRated charging current20.0A, read cannot be modifiedRated discharge current19.0A, read unmodifiableRated shop power492W, read unmodifiableNominal capacity10000mAH, can be modified
BMS version number30, read the BMS version, cannot be modifiedBMS modelSP17S003, read cannot be modifiedProduction Date2022-1-18, read unmodifiableBMS address24 digits, read and cannot be modifiedRated charging current20.0A, read cannot be modifiedRated discharge current19.0A, read unmodifiableRated shop power492W, read unmodifiableNominal capacity10000mAH, can be modified
modifiedBMS modelSP17S003, read cannot be modifiedProduction Date2022-1-18, read unmodifiableBMS address24 digits, read and cannot be modifiedRated charging current20.0A, read cannot be modifiedRated discharge current19.0A, read unmodifiableRated shop power492W, read unmodifiableNominal capacity10000mAH, can be modified
BMS modelSP17S003, read cannot be modifiedProduction Date2022-1-18, read unmodifiableBMS address24 digits, read and cannot be modifiedRated charging current20.0A, read cannot be modifiedRated discharge current19.0A, read unmodifiableRated shop power492W, read unmodifiableNominal capacity10000mAH, can be modified
Production Date2022-1-18, read unmodifiableBMS address24 digits, read and cannot be modifiedRated charging current20.0A, read cannot be modifiedRated discharge current19.0A, read unmodifiableRated shop power492W, read unmodifiableNominal capacity10000mAH, can be modified
BMS address24 digits, read and cannot be modifiedRated charging current20.0A, read cannot be modifiedRated discharge current19.0A, read unmodifiableRated shop power492W, read unmodifiableNominal capacity10000mAH, can be modified
Rated charging current20.0A, read cannot be modifiedRated discharge current19.0A, read unmodifiableRated shop power492W, read unmodifiableNominal capacity10000mAH, can be modified
Rated discharge current 19.0A, read unmodifiable Rated shop power 492W, read unmodifiable Nominal capacity 10000mAH, can be modified
Rated shop power492W, read unmodifiableNominal capacity10000mAH, can be modified
Nominal capacity 10000mAH, can be modified
default settingCycle capacity8000mAH, can be modified
full capacity 10000mAH, can be modified
Single Over-voltage Protection 3650mV, can be modified
Cell over-voltage recovery 3550mV, can be modified
Single Over-voltage Delay 2S, can be modified
Cell under-voltage protection 2500mV, can be modified
Cell under-voltage recovery 2700mV, can be modified
Cell under-voltage delay 2S, can be modified
Protection parametersTotal voltage over-voltage60000mV, can be modified
protection
Total pressure over-voltage 57000mV, can be modified
recovery
Total voltage over-voltage delay 2S, can be modified
Total voltage under-voltage 36000mV, can be modified
protection
lotal voltage under-voltage 40000mV, can be modified
Tetol wiltow wiltow dalam GS can be redified
Channe over evenent restection 20000ml con he modified
Charge over-current protection Sobooma, can be modified
Charge over-current delay os, can be modified
Discharge over-surrent protection = -30000mA can be modified
Discharge over current dology for each be modified
Discharge over-current recovery 30c can be modified
delay
Secondary over-current protection 78mA optional: 16 22 28 34 38 44 50
$\begin{array}{c} \text{ secondary over current protection} \\ \text{ secondary over current protection} \\ \text{ found, optional. 10, 22, 20, 54, 30, 44, 50,} \\ \text{ secondary over current protection} \\ \text{ found, optional. 10, 22, 20, 54, 30, 44, 50,} \\ \text{ secondary over current protection} \\ \text{ found, optional. 10, 22, 20, 54, 30, 44, 50,} \\ \text{ secondary over current protection} \\ \text{ found, optional. 10, 22, 20, 54, 30, 44, 50,} \\ \text{ secondary over current protection} \\ \text{ found, optional. 10, 22, 20, 54, 30, 44, 50,} \\ \text{ secondary over current protection} \\ \text{ found, optional. 10, 22, 20, 54, 30, 44, 50,} \\ \text{ secondary over current protection} \\ \text{ found, optional. 10, 22, 20, 54, 30, 44, 50,} \\ \text{ secondary over current protection} \\ \text{ found, optional. 10, 22, 20, 54, 30, 44, 50,} \\ \text{ secondary over current protection} \\ found, optional. 10, 22, 20, 54, 30, 44, 50, 44, 50, 56, 56, 56, 56, 56, 56, 56, 56, 56, 56$
Current setting Secondary over-current protection 39mA optional: 8 11 14 17 10 22 25
28. 31. 33. 36. 39. 42. 44. 47. 50.



Class: D-Class - Public

	Secondary over-current delay	20mS, optional: 8, 20, 40, 80, 160, 320, 640, 1280.
	Short circuit protection	89mV, optional: 22, 33, 44, 56, 67, 78, 89, 100.
	Short circuit protection delay	70uS, optional: 70, 100, 200, 400.
	Short circuit protection recovery	6S, can be modified
	delay	
temperature setting	Charging high temperature protection	75°C, can be modified
	High temperature recovery after	55℃, can be modified
	charging	
	Charging high temperature delay	2S, can be modified
	Charging low temperature protection	-10°C, can be modified
	low temperature recovery	0℃, can be modified
	Charging low temperature delay	2S, can be modified
	Discharge high temperature	75℃, can be modified
	protection	
	Discharge high temperature recovery	55℃, can be modified
	Discharge high temperature delay	2S, can be modified
	Discharge low temperature	-10°C, can be modified
	protection	
	Discharge low temperature recovery	0° C, can be modified
	Discharge low temperature delay	2S, can be modified
	Equalization voltage	3600mV, can be modified
Equalization settings	Equalization Accuracy	50mV, can be modified
	Turn on equalization	open close
	Balanced way	Charge Equalization/Static Equalization
	10%	3100mV, can be modified
	20%	3300mV, can be modified
	30%	3500mV, can be modified
	40%	3600mV, can be modified
	50%	3700mV, can be modified
Capacity Voltmeter	60%	3800mV, can be modified
	70%	3950mV, can be modified
	80%	4000mV, can be modified
	90%	4050mV, can be modified
	100%	4150mV, can be modified
Connection internal resistance	String 1 - String 30	OmR, can be modified
	switch function	switch
	load detection	switch
	Equalization function	switch
	Balanced way	switch



Class: D-Class - Public

	Temperature control_1	switch
Function settings	Temperature control_8	
	led	switch
	FCC function	switch
	RTC	switch
	GPS	switch
	Charging handshake function	switch
	Buzzer enable	switch
	Identify current	200mA, can be modified
	sleep time	30S, can be modified
system settings	Capacity Correction Interval	3600S, can be modified
	string number	14, can be modified
	sense resistance	0.2mR, can be modified

• 11 中国]移动 4G	10:22	@ 🕈 🍯 🕏 85% 💻 (
		参数		
	基本信息		>	N
١	初始设置		>	
(\neq)	保护参数		>	
Â	电流设置		>	
ß	温度设置		>	
ക	均衡设置		>	
$\widehat{\vee}$	容量电压表		>	
¢¢	连接内阻		>	
\bigotimes	功能设置		>	
	系统设置		>	

()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()
 ()

 \sim

历史

-<u>o</u>---

控制

・ 参数 名PP physical display Figure 9



3.6.2 Parameter setting



I.



APP physical display Figure 10



•Ⅲ甲国移动 46	保护参数	⊌ → ♥ ¥ 8/% █▋)
项目	参数	设定
单体过压保护	单体过压保护值, 输入需要设置参数 ·3650m 点击 " SET" 即可	SET
单体过压恢复	3550m ^v	V SET
单体过压延时	2	SET
单体欠压保护	2500m [\]	V SET
单体欠压恢复	2700m ¹	V SET
单体欠压延时	2	s SET
\wedge \checkmark		完成
1	2 АВС	3 Def
<u>4</u> вні	5 ЈКС	6 мно
7 pqrs	8 TUV	9 wxyz
	0	$\langle X \rangle$

APP physical display Figure 11



Shenzhen Jiabaida Electronic Technology Co., Ltd. Class: D-Class - Public

ull 中国移动 4G	15:07	@ 🛪 🖲 🕇 87% 🔲
\leftarrow	电流设置	
项目	参数	设定
充电过流保护	30000mA	SET
充电过流延时	输入需要设直的	SET
充电过流恢复延时	20s	SET
放电过流保护	-30000mA	SET
放电过流延时	6s	SET
放电过流恢复延时	30s	SET
二级过流保护值*2		78m4 >
二级过流保护	点击箭头,出现下拉 框,选择需要设置的 数值	39mA >
二级过流延时		20mS >
短路保护		89mV >
短路保护延时		70uS >
1	APP physical dis	play Figure 12



Class: D-Class - Public

• •11 中国移动	4G 15:0 容量电	8 压表	@ √ Ø ≵	87% 🔲
项目	参数			设定
10%		3100mV		SET
20%	输入需要修改的变数, 此参数很重要,请结合 产品规格书或者实际 修改,修改完占击"SFT	3300mV		SET
30%	即可	3500mV		SET
40%		3600mV		SET
50%		3700mV		SET
60%		3800mV		SET
70%		3950mV		SET
80%		4000mV		SET
90%		4050mV		SET
100%		4150mV		SET
3	APP pl	hysical dis	play Figur	re 13

3.7 Users interface 3.7.1 Interface Introduction

primary information	secondary information	Example
Complete material	Phone number	Phone number
	Mail	email address



Shenzhen Jiabai	<u> Class: D-Class - Public</u>	
Device bound	Bluetooth list	Unbind the device
Lithium battery notice	Web links	Web links
Instructions for using BMS	Web links	Web links
About Us	Company Profile	company profiles
	the way of buying	Alibaba, Taobao, service hotline
	contact us	Official website link, service
		hotline, manufacturer address
Logout	Log out of current account	quit







APP physical display Figure 14

3.7.2 Bind/Unbind Device

1. Binding device: When connecting to Bluetooth for the first time, the APP automatically pops up a dialog box to prompt: whether to bind this device, click OK to bind;ObtainSetting permissions requires background consent to modify parameters.

2. Unbind devices: Enter the My interface, select the device that needs to be unbound, and click Unbind. One account can be bound to multiple devices.

Ⅲ 中国移动 4G	18:01	@ 🛪 Ö 🛠 96% 🗩	
\leftarrow	已绑定设备		$\sim \sim \sim$
ABCDEFGHIJ888 A4:C1:38:9B:F7:F2		解绑	
A4:C1:38:11:7F:2E	点击解绑,即可 当前设备	解绑 解绑	

APP physical display Figure 15



When you forget your login password, You can reset a new password through your email. The steps are as follows:

1. Open the login interface, find the forgotten password, click it, and the reset password interface will pop up;

2. Enter the corresponding binding email and click Send Verification Code. Generally, you will receive the verification code within 60S, pay attention to open the mailbox to check;

3. Enter the verification code, set a new password, and finally click OK.













APP physical display Figure 16-17

4. Services

4.1 Scope of Services

- 1. Support APP name and logo modification, customized according to customer needs;
- 2. Support Google, APP store store applications;
- 3. Support operation interface design, 100% meet customer needs;



4. Support adding custom functions, and provide function implementation solutions.

Note: The above services are modified based on the Xiaoxiang Electric APP, and the excess part needs to be confirmed with our company.

4.2 APP development process

